


Exchange floor duct seals




1. Determine the length of the seal

Apply the seal to the floor duct cover and cut to the required length.

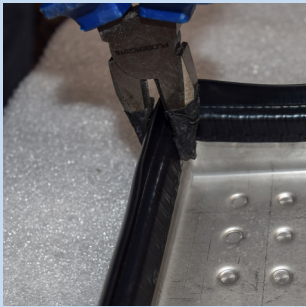

Note

Even out any creases in the corners with the combination pliers.

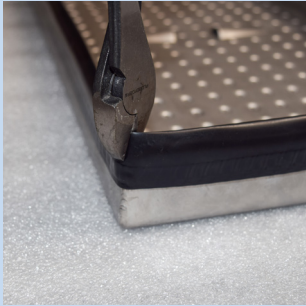

2. Prepare corners for gluing

2.1 Cut the top lip in all corners with side cutters.



2.2 Roughen the glued areas with sandpaper.

Tip

Roughening improves the adhesion.




2.3 Clean glued areas generously with brake cleaner.



3. Glue

Apply a thin layer of adhesive to the cut surfaces with the applicator. Press the adhesive together and hold for a few seconds. Repeat for all glued surfaces.

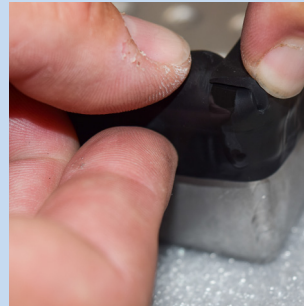

Note

Always glue the corners together overlapping, always place the long side over the wide side. Repeat for all corners.



Ready assembled floor duct seal

Necessary equipment

- › Tin snips or side cutters
- › Soft-face or rubber mallet
- › Combination pliers
- › Loctite adhesive
- › Commercially available brake cleaner
- › Clean, dry cloth
- › Sandpaper, grain 80

General notes

When disassembling the covers, pay attention to the sequence, as they must be reassembled in the same order. The disassembly tool was handed over together with the service box during acceptance and should be on site. When replacing in the pool, always use an underlay to avoid damage to the bottom of the pool. When inserting the lids, silicone spray should be used, and attention must be paid to the order and direction of pushing. A plan can be found in the service box. Only use A4 (1.4404) screws (stainless). Grease the screws with e.g. Molykote paste when inserting them.